
# ENDOCLOTTM PHS

## **Quick Reference Chart**


### (1) SETUP

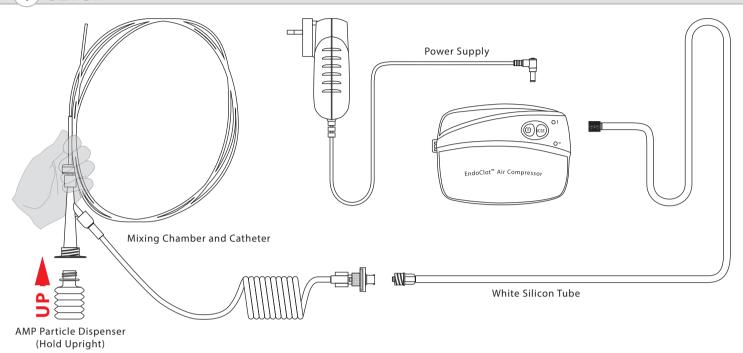

#### 2 PREPARE AND INSERT







Start Compressor




Ensure High Flow During Insertion




Avoid tip contact with wet surfaces such as mucosa or blood

Insert Catheter


#### (3) SPRAY

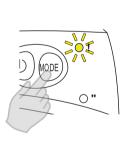


Set Low Flow for Spraying.

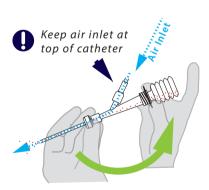

To spray, tip powder into mixing chamber. Tap the AMP dispenser to assist powder into chamber.

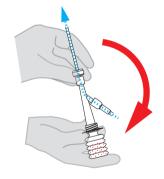

To stop, return catheter to upright position.

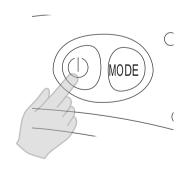

WITHDRAW

Stop Compressor

